# ASSEMBLY INSTRUCTIONS FOR CLASSIC AERO 'BCL' WALL FIX BENCH

# LEGS/WALL GRACKETS INCLUDED WITH BENCH

1M BENCH -2No.

1.5M BENCH - 3Na.

2M BENCH - 3No.

2.5M BENCH - 4Na.

3M BENCH - 4No.

### PLEASE NOTE

IF A CONTINUOUS RUN OF BENCHING HAS BEEN REQUESTED
DOUBLE SIDED WALL BRACKETS WITH 8 HOLES ON TOP PLATE WILL
BE PROVIDED TO BE LOCATED AT ASH SLATS JOINTS

## RECOMMENDED FRING DISTANCES

1M BENCH - 840MM BETWEEN UPRIGHTS


1.5M BENCH - 650MM BETWEEN UPRIGHTS
2M BENCH - 900MM BETWEEN UPRIGHTS

2.5M BENCH - 780MM BETWEEN UPRIGHTS


3M BENCH - 900MM BETWEEN UPRIGHTS

#### **PLEASE NOTE**

NO SEAT SLATS SHOULD BE UNSUFFORTED FOR MORE THAN DOOM!

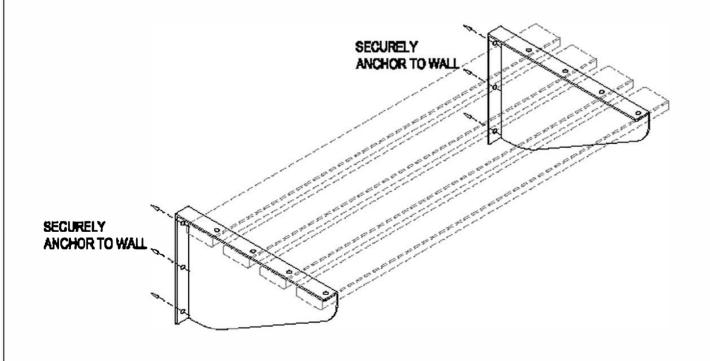

PLEASE ENSURE CENTRE OF SLATS LINE UP WITH PRE-DRILLED HOLES AS INDIGATED BELOW

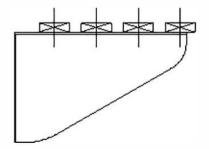



© COPYRIGHT ESE Direct Ltd

No westfortest disclosure, regrest/ction or menufacture of
details or product permitted without prior written consent.

