



ASSEMBLY INSTRUCTIONS FOR EVOLVE 'DSX' DOUBLE SIDED NO TOP SHELF

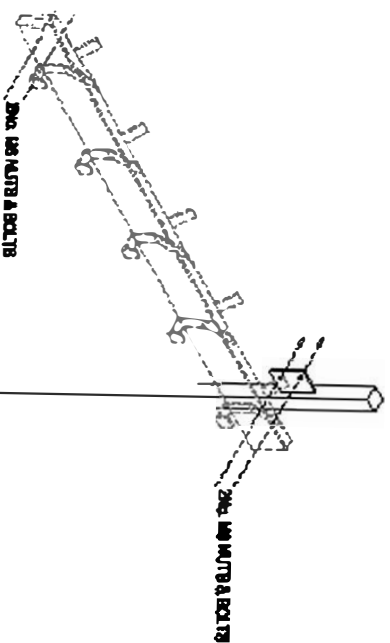

2x 1/4" AND 2x 3/8" BOLTS INCLUDE A SECOND GREAT FRAME AND CENTER LEGS TO BE FORCED IN THE SAME WAGON

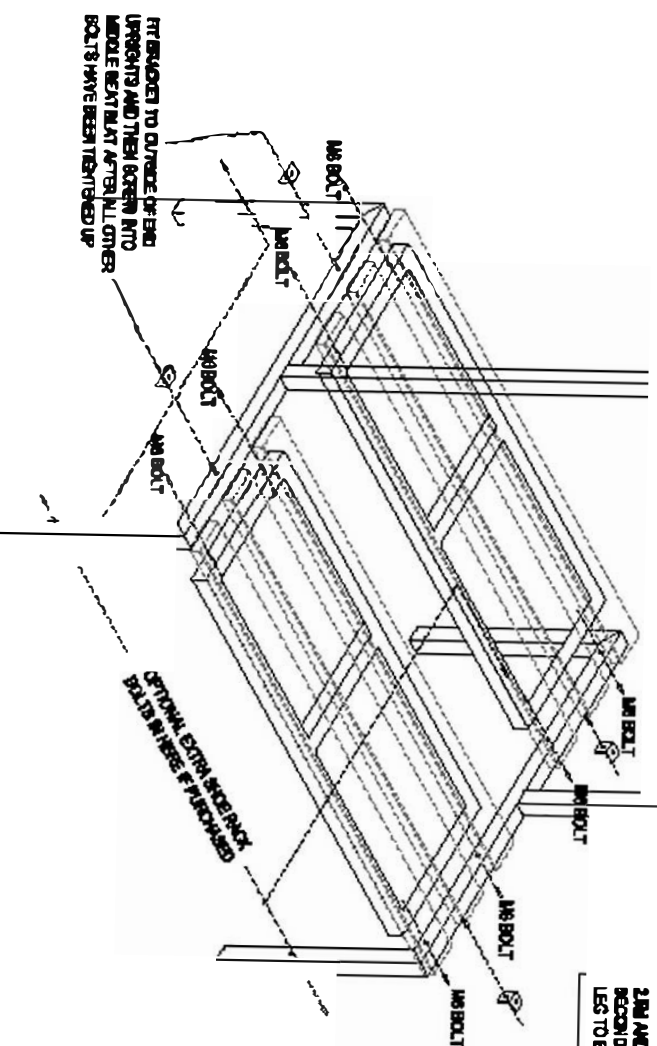

FIT BRACKET TO OUTSIDE OF END UPRIGHTS AND THEN SCREW INTO WAGON BEAT BLAT AFTER ALL OTHER BOLTS HAVE BEEN TIGHTENED UP

OPTIONAL EXTRA SHELF MAY BE ADDED IN HERE IF REQUIRED

Jenchnura

